

INSTALLATION :

Install the ceiling hooks in the overhead support. The hooks should be approximately 4 feet apart. The supports can be ceiling joists, a sturdy limb, or a beam installed for the swing. A ready made stand or instructions to build one are available, please inquire. If the ceiling joists are not exposed, locate one using a stud finder. They are usually 16 to 24 inches apart. Once you find a suitable support, drill a 3/16" starter hole to screw the ceiling hooks into and tighten until the shank is no longer visible. Do not adjust the chains as they are properly connected and able to withstand approximately 500 lbs. of weight. We have replacement chain sets available for sale if needed.

MAINTENANCE :

The rope body of your Rope Porch Swing is hand woven. If the weave of the rope body is pulled out of shape, you can brush or adjust it into shape with your hands. To keep your swing in good condition, it is very important to consistently check the varnish for weather damage. The wood frame should be periodically refinished using a high quality polyurethane varnish. For complete instructions on refinishing your swing, please visit www.nagshead.com/care.asp, or give us a call. To wash the rope seat, you can either leave the ropes attached to the chair or remove them. **Before removing the ropes from the wooden bars, slide guide ropes through the topmost and bottommost row of loops, and tie them off.** You will need OxiClean or laundry detergent and a soft scrub brush. To begin cleaning, wet the rope and apply the detergent. Additionally, you may use a very mild bleach solution, but be sure to rinse the ropes thoroughly afterwards. Take a handful of rope in each hand and rub the pieces together; using the soft-bristled scrub brush to work on any stains. Once you've cleaned all of the rope, rinse it thoroughly. If you have removed the rope from the swing, arrange it on a flat surface to air-dry so that the rope does not stretch.

If you have any questions about maintaining your swing, please give us a call at 1-800-344-6433 or 252-441-6115

WARRANTY AND RETURNS :

Nags Head Hammocks products are guaranteed to be free of defects in both workmanship and material. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty, nor is damage caused by normal wear, mildew, or improper care, including storage, maintenance, and assembly. If you are not satisfied with an item, return it unused in its original packaging for a complete refund or exchange. You can return it to any of our stores or to our warehouse, Nags Head Hammocks, 305 Industrial Blvd., Greenville, NC 27834. Please include a copy of your receipt and your contact information.




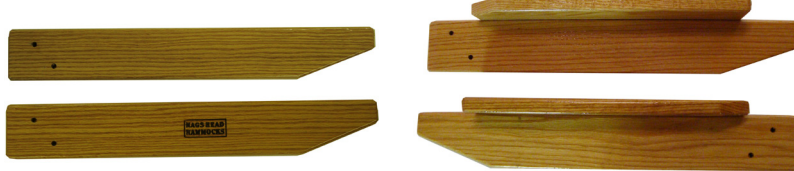

ORIGINAL OR DELUXE ROPE PORCH SWING



Congratulations! You now own a Porch Swing that was handcrafted in North Carolina by Nags Head Hammocks. We hope you will have many years of comfort and enjoyment. If you have any questions, please feel free to contact us. Relax! It's a Nags Head Hammock original.

P.O. Box 533
Nags Head, NC 27959
1-800-344-6433 • 252-441-6115
www.nagshead.com

PARTS LIST :

 <p>2 Verticle Pieces</p>	 <p>1 Loose 48" Oak Bar</p>
 <p>2 Hanging Hooks:</p>	 <p>2 Original Arm Units OR 2 Deluxe Arm Units</p>
<p>1 Hardware Pack:</p> <ul style="list-style-type: none"> (1) Instruction Sheet (2) 2.5" Carriage Bolts (2) 2.5" Lag Bolts (2) Hex Nuts (2) Washers (2) Lock Washers (2) Chain Assemblies 	 <p>1 Roll-Up : Note: The "top" bar of the roll-up features a thin wooden strip with brass tacks. The "bottom" bar has a thicker wooden strip attached with screws.</p> <p>Tip for Assembly : Do not tighten bolts completely until fully assembled.</p>

You Will Need : One 7/16" wrench and a mallet or hammer

ASSEMBLY :

Step 1 : Set the arm units on the floor facing front (see diagram) approximately 4 feet apart. If sitting in the swing, the branded arm unit should be on your right hand side. At this time remove chains from the box and completely untwist them.

Step 2 : Attach the 48" Oak Bar to the underside of the arm unit with a washer and 2.5" lag bolt. This may be more easily achieved by flipping the arm unit upside down. Use the smaller hole closer to the back of the arm. Tighten slowly to avoid overheating the bolt. Do not fully tighten the lag bolt at this time.

Step 3: Flip the arm unit right side up if you have not done so already. Position the 'bottom' bar of the rollup unit to the underside of the arm unit (in front of the loose bar) and attach it using a the 4.5" eyebolt and washer found on the longest chain piece of one of the chain assemblies. Repeat on the other side.

Step 4 : Place a vertical piece on the inside of the arm unit. The two holes of the vertical piece should line up with the two holes in the back of the arm unit. Insert the 2.5" carriage bolt into the lower hole from the inside of the swing so that the washer, lockwasher, and nut are on the outside of the swing. Insert the 3.5" eyebolt found on the second longest chain piece through a washer and then through the upper hole from the outside of the swing. Secure with washer and hex nut. Repeat on the other side.

Step 5 : Attach the 'top' bar of the roll-up to top of the vertical piece using the chain's remaining 3.5" eyebolt and washers.

Step 6 : Tighten all hardware

DIAGRAM :

