

INSTALLATION :

Locate a suitable sturdy place to hang your swing. The support can be a ceiling joist, a sturdy limb, or a beam installed for the swing. Ready made stands or instructions to build one are available, please inquire. If ceiling joists are not exposed, locate one using a stud finder. They are usually 16 to 24 inches apart. Once you find a suitable support, open the hanging kit and slip the closed end of the 'S' hook onto the handle. Position the handle directly above the center of your swing and drill two 3/16" starter holes. Secure with the two lag bolts. Use the chain included in the hanging set to adjust the height of your swing. We find that the swing is easiest to use when it hangs about 15" off the ground; low enough to keep your feet on the floor.

MAINTENANCE :

The rope body of your Bent Oak Swing is hand woven. If the weave of the rope body is pulled out of shape, you can brush or adjust it into shape with your hands. To keep your bent oak swing in good condition, it is very important to consistently check the varnish for weather damage. The wood frame should be periodically refinished using a high quality polyurethane varnish. For complete instructions on refinishing your swing, please visit www.nagshead.com/care.asp, or give us a call. To wash the rope seat, you can either leave the ropes attached to the chair or remove them. **Before removing the ropes from the wooden bars, slide guide ropes through the topmost and bottommost row of loops, and tie them off.** You will need OxiClean or laundry detergent and a soft scrub brush. To begin cleaning, wet the rope and apply the detergent. Additionally, you may use a very mild bleach solution, but be sure to rinse the ropes thoroughly afterwards. Take a handful of rope in each hand and rub the pieces together; using the soft-bristled scrub brush to work on any stains. Once you've cleaned all of the rope, rinse it thoroughly. If you have removed the rope from the chair, arrange it on a flat surface to air-dry so that the rope does not stretch.

If you have any questions about maintaining your chair, please give us a call at 1-800-344-6433 or 252-441-6115

WARRANTY AND RETURNS :

Nags Head Hammocks products are guaranteed to be free of defects in both workmanship and material. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty, nor is damage caused by normal wear, mildew, or improper care, including storage, maintenance, and assembly. If you are not satisfied with an item, return it unused in its original packaging for a complete refund or exchange. You can return it to any of our stores or to our warehouse, Nags Head Hammocks, 305 Industrial Blvd., Greenville, NC 27834. Please include a copy of your receipt and your contact information.

Instruction #: 5091NH, 0G.11



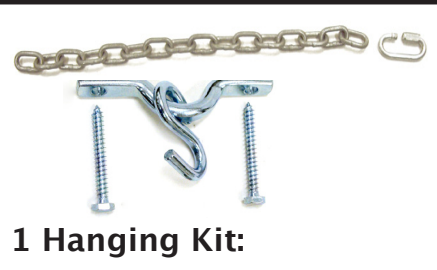


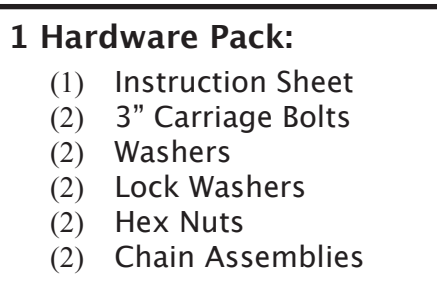
SINGLE BENT OAK PORCH SWING



Congratulations! You now own a Bent Oak Porch Swing that was handcrafted in North Carolina by Nags Head Hammocks. We hope you will have many years of comfort and enjoyment. If you have any questions, please feel free to contact us. Relax! It's a Nags Head Hammock original.

P.O. Box 533
Nags Head, NC 27959
1-800-344-6433 • 252-441-6115
www.nagshead.com

PARTS LIST :

	 <p>1 Spreader Bar with Logo</p>
	 <p>1 Loose Bar</p>  <p>1 Roll-Up : Note: The “top” bar of the roll-up features a thin wooden strip with brass tacks. The “bottom” bar has a thicker wooden strip attached with screws.</p>
 <p>1 Hanging Kit:</p> <p>1 Hardware Pack:</p> <ul style="list-style-type: none"> (1) Instruction Sheet (2) 3” Carriage Bolts (2) Washers (2) Lock Washers (2) Hex Nuts (2) Chain Assemblies 	<p>Tips for Assembly :</p> <p>Tip 1: Do not tighten bolts completely until fully assembled</p> <p>Tip 2: For a more uniform look, face all bolts in the same direction</p> <p>Tip 3: Before assembly, lay the chain sets on a flat surface. Make sure chains are completely untwisted.</p>

You Will Need : One 7/16” wrench and a mallet or hammer

ASSEMBLY :

Step 1 : Set the arm units on the floor approximately 3 feet apart. If sitting in the swing, the branded arm unit should be on your right hand side.

Step 2 : Locate the loose bar and insert a bolt into each hole. Tap the bolts with a hammer until the head of the bolt is flush with the wood.

Step 2 : Take the loose bar and attach it to the inside of one arm unit under the curved arm. Secure with a washer, lockwasher and nut. Repeat on the other side.

Step 4 : Attach the ‘top’ bar of the roll-up to the back of the swing using the eye-bolt found on the ‘short’ chain piece (See Diagram). Secure with washer and nut. Repeat on other side.

Step 5 : Attach the ‘bottom’ bar of the roll-up to the front of the swing using the eyebolt found on the ‘long’ chain piece (See Diagram). Secure with washer and nut. Repeat on the other side.

Step 6 : Install the spreader bar by inserting the unattached end of one of the chain sets up through one of the holes in the spreader bar. Make sure the logo faces front. Repeat on the other side, then slide the bar down the chain until it settles.

Step 7 : Tighten all hardware

DIAGRAM :

