

# Cushioned Single Swing

Weight limit: 350 pounds

Congratulations on purchasing our Cushioned Single Swing. You're going to love its quality and durability!

**QUESTIONS REGARDING THIS PRODUCT?** Call our customer service line (252) 758-0641.

Visit us online at [www.thehammocksource.com](http://www.thehammocksource.com).

**Before beginning assembly, check that you have all parts.**

**YOUR BOX SHOULD CONTAIN:**


- 1 - Cushioned Single Swing, chain attached
- 1 - "S" hook
- 1 - Steel hanging bracket
- 2 - 5/16" x 2½" hex head lag bolts

**TOOLS YOU'LL NEED:**

- Drill with 3/16" bit
- #13 metric wrench or socket or adjustable wrench



**INSTALLED BRACKET, "S" HOOK, CLOSE-UP.**

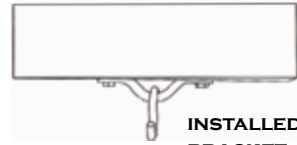

**INSTALLED BRACKET, "S" HOOK, SIDE VIEW.**



## ASSEMBLY INSTRUCTIONS

**STEP 1.** Choose a hanging location that is 6½-8½ feet above ground/floor level, and that will safely support 350 pounds. The hanging beam should be wood, though NOT spruce or white pine, that is free of knots, cracks and rot.

▶▶▶ **The hanging bracket should ONLY be used with wood. This bracket is NOT safe or approved for use with concrete or steel surfaces, plastic construction, particle board or other composite material, or vinyl siding. If you have questions concerning proper installation, including questions about the weight capacity of a potential installation surface, consult a building expert. The Hammock-Source is not responsible for improper installation.** ◀◀◀

**STEP 2.** Position the hanging bracket along the center of the wooden beam you've chosen for hanging your swing. Mark drill holes on the beam using a pencil through the bracket's two bolt holes.

**STEP 3.** Drill approximately 2½ inches deep at the two spots you marked through the bracket bolt holes.

**STEP 4.** Fit the "S" hook onto the hanging bracket. Next, position bracket holes over drill holes, and install the two bolts by hand. Tighten the bolts with wrench or socket listed above. **Do not overtighten, as bolts can strip the wood, compromising the swing's weight capacity.**

**STEP 5.** Hook a link of swing chain to the bottom of the "S" hook. Set swing height by adjusting the length of the hanging chain. For maximum comfort and safety, your feet should be touching the ground/floor when you're sitting in your swing with your knees slightly bent. Please note that the first time you use your new swing, the ropes will stretch, so you may need to tweak the height of your swing using the hanging chain at least once before the swing is positioned exactly how you want it.

## CARE & MAINTENANCE

- Your Cushioned Single Swing is designed to be weatherable and to resist fading. However, during extreme weather or long periods when the swing is going unused, store it indoors in a clean, dry place, away from strong chemicals, including pesticides, which can damage both rope and fabric.

- Squirrels, mice, birds and bugs will sometimes make off with rope fibers to build nests and to live in, so always inspect your swing before getting into it.

- To clean your swing, stretch it out on a clean, non-abrasive surface, wet it with a hose and then gently scrub it with a soft brush and a mild detergent/warm water solution. After washing, rinse the swing thoroughly, allowing it to dry completely before hanging or storing it.

**SAFETY INFORMATION**

- Inspect both swing and hanging and mounting hardware before each use to ensure safety.
- Swing is not built to hold more than one person at a time.
- Swing is not built for high or rough swinging, or for sharp twisting movements.
- Do not allow young children to use the swing without adult supervision. **NEVER place infants in the swing!**
- Allowing the hanging chain to become twisted dramatically reduces its strength.

**WARRANTY**

Products are guaranteed to be free of defects in workmanship and materials for up to one year from date of purchase. If an item is found to be defective within that time, The Hammock Source will replace it at no charge. Normal wear and tear, including prolonged exposure to snow, rain and heavy humidity, is not covered, nor is mold, mildew or damage from improper storage, maintenance or installation. An original sales receipt must accompany any returned product, along with a Return Authorization Number from The Hammock Source customer service; call (252) 758-0641